

INSTALLATION INSTRUCTIONS

PRODUCT: ALL LIGHTS ON™ FOR TOYOTA TACOMA

FPE-2024-117

January 2024

Page 1 of 1

INSTRUCTIONS FOR: 2016-2023 Tacoma with factory installed fog lamps


ESTIMATED INSTALLATION TIME: 5 minutes

STEP 1: OPEN the vehicle hood and locate the relay / fuse block on the right side of the engine, behind the battery. REMOVE the cover panel.

STEP 2: Carefully REMOVE the relays labeled: FOG FR and DIMMER. It may be necessary to use a pair of pliers to remove the relays.





This side front of vehicle

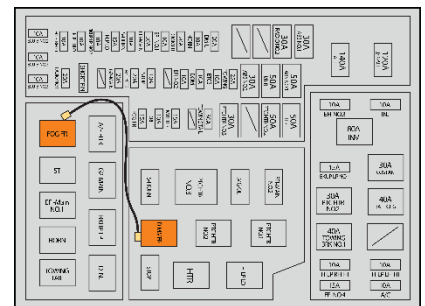

STEP 3: Insert the two relays that were removed through the All Lights On boards with the wire connection facing towards the top of the relay. The board will make a firm connection with the relay.

NOTE: See orientation of boards onto relays at right. DO NOT install upside down.

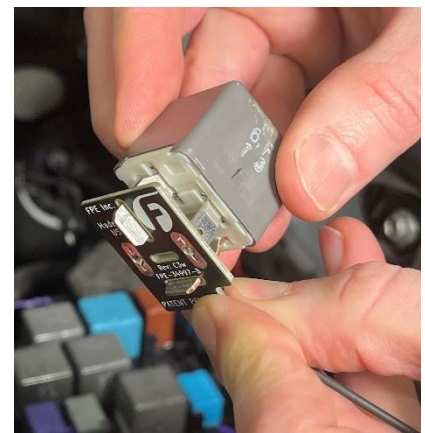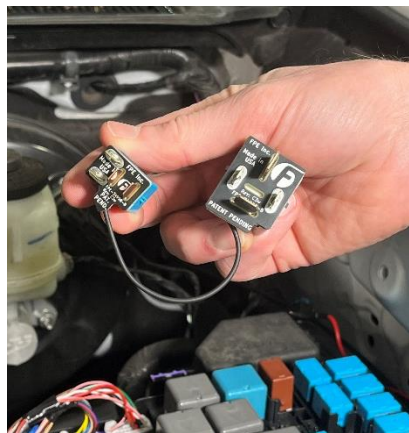

STEP 4: Reinstall the two relays back into their original location. Route the connecting wire as shown at right. Install the relay panel cover.


Operation:

Low Beams Only: Normal operation

Fog Lights Only: Normal operation

Low Beams and Fog Lights: Normal operation

High Beams: High beams, low beams, and fog lights on

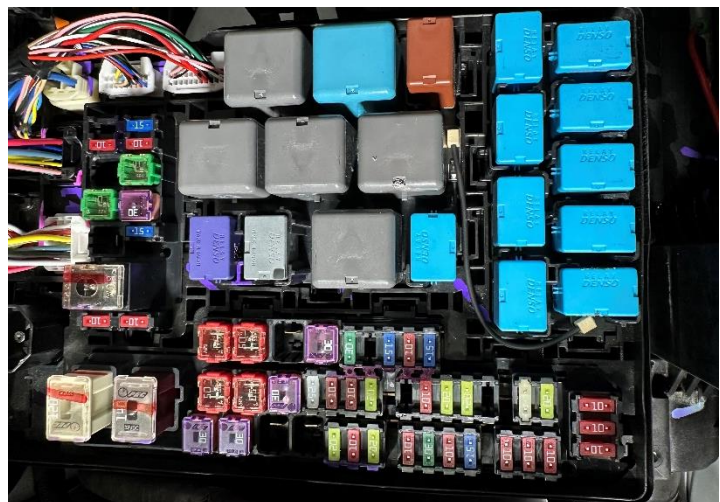

INSTALLATION INSTRUCTIONS

